


## 37 22 540 Replacing air supply unit

### Caution!

After assembly, perform height setting offset, refer to BMW Diagnosis System.

Extreme cleanliness must be ensured in area of air line connections during removal and installation.

Even small dirt particles can cause leakage in the system.

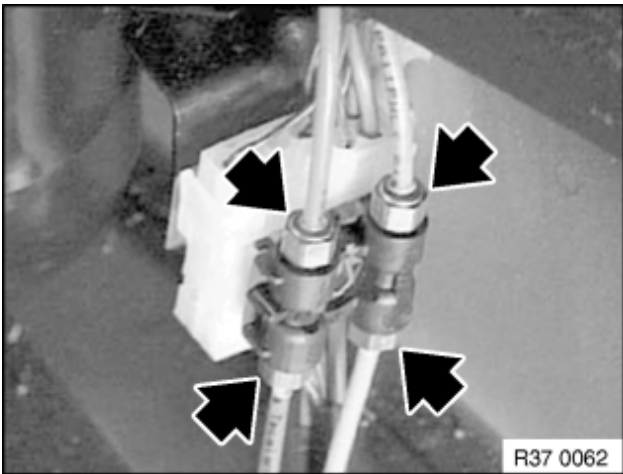

Remove spare wheel.


Release union screws and detach lines (upper arrows).

If necessary, release cable ties.

### Installation:

[refer to 37 13 ... Notes on assembly.](#)

Install lines with identical colors.

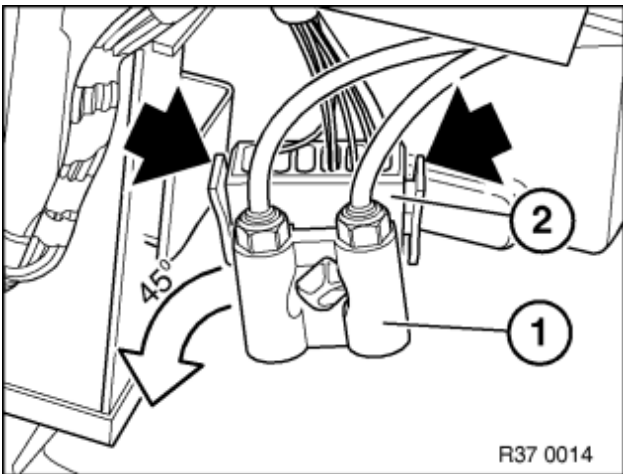

Rotate distributor block (1) through 45° and remove.

Twist connector housing (2) through 45° and remove.

Compress locking unit and remove connector.

Release screws/nuts, carefully turn air supply system over and set down towards front; if necessary, set down on a clean cloth.

Do not kink air pipes.

After completing work, adjust ride level height of vehicle.

