

51 47 101 Removing and installing/replacing luggage compartment floor trim panel

Open trunk lid.

Unlock luggage compartment floor trim panel (1) at handle (2) and remove.

