


51 47 172 Removing and installing/replacing flap in luggage compartment trim, left or right

Left side:

Left side:

Press release button (1).

Open flap (2) and remove.

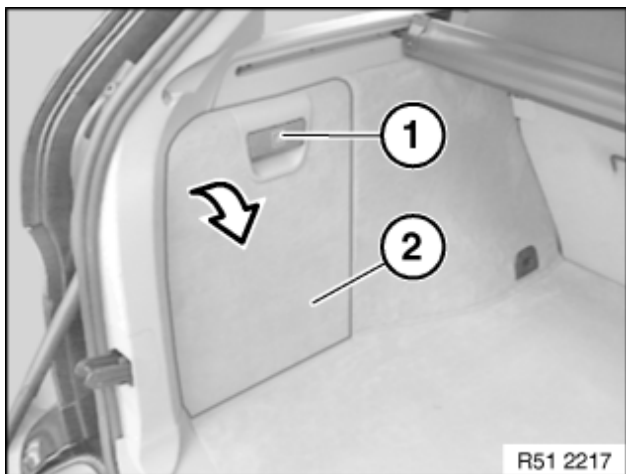

Right side:

Press release button (1).

Open flap (2) and remove.

