


51 71 412 Removing and installing rear spoiler

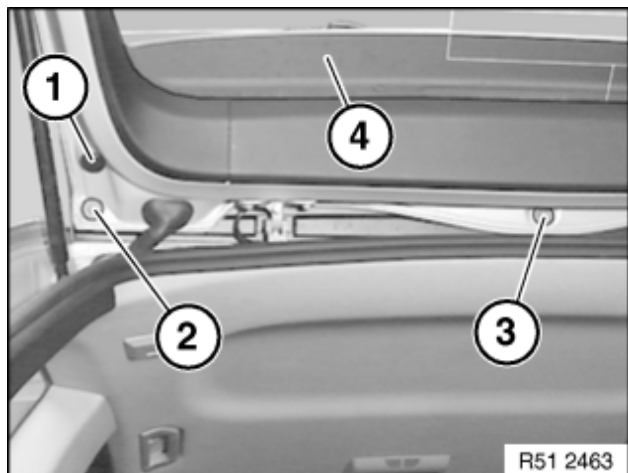

Lever out covers (1) on left/right and release screw underneath.

Release screws (2) on left/right and screw (3).

Remove rear spoiler and set down on a clean surface.

Installation:


If necessary, make a note of number of shims on screws (2) and (3) and refit them during installation at same position.

Tighten screw (3) first.

[Tightening torque 51 71 2AZ.](#)

Vertical adjustment,

[refer to Gap dimensions, body.](#)

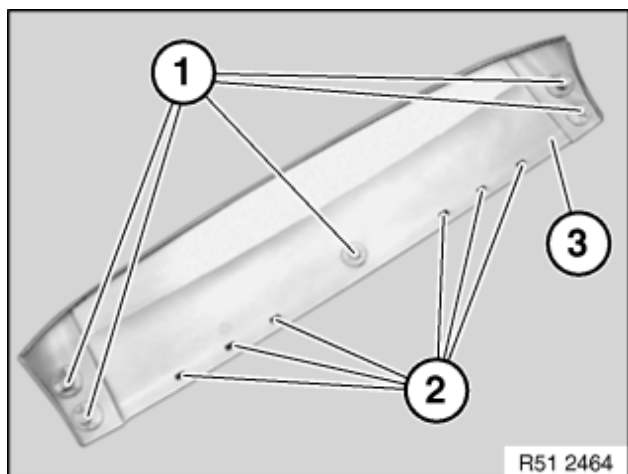

Installation:

Threads (1) on rear spoiler (3) must not be damaged.

If necessary, replace faulty tapes (2) (dual-lock tape).