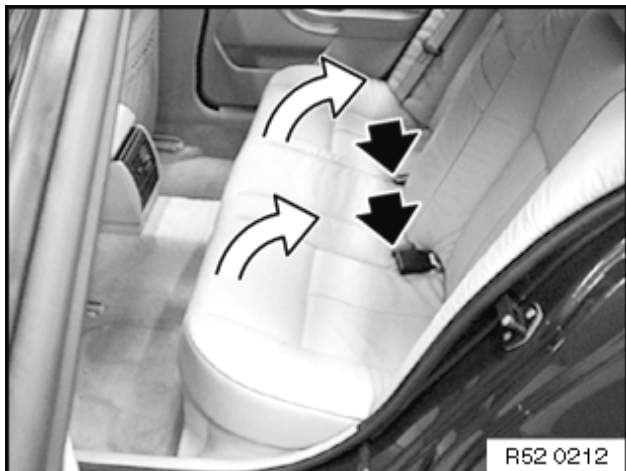


**52 26 005 Removing and installing/replacing rear seat (through-loading system)**

Unclip rear seat on left and right and raise.

Pull seat forwards slightly and simultaneously tighten top strap a little.

Release [screw](#) of left belt buckle and central top strap.

Remove rear seat towards front.

**Installation:**

Insert seatbelt locks in recesses in rear seat.