


## 64 11 749 Removing and installing heater control (automatic air conditioning)

### Special tools required:

- [00 9 340](#)

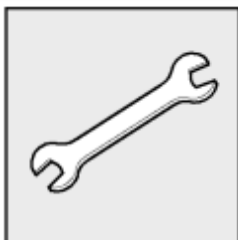

Unlock heating controls (1) with special tool [00 9 340](#) and pull out in direction of arrow.

### *Installation:*

Ensure that heating controls (1) are correctly seated.

Disconnect plug connections and remove heating controls (1).