
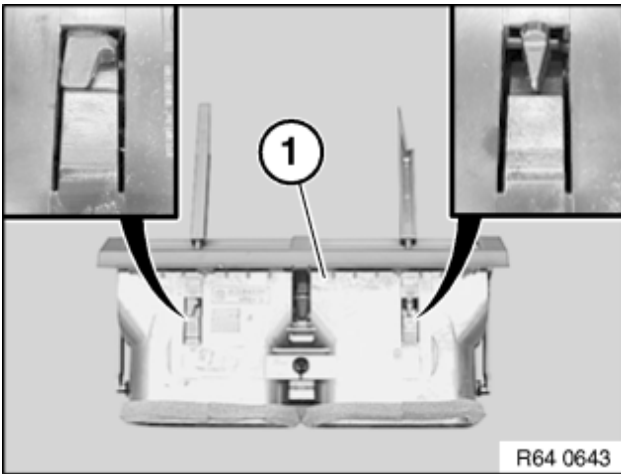


64 22 161 Removing and installing/replacing fresh-air grill center

Special tools required:


- [64 1 020](#)

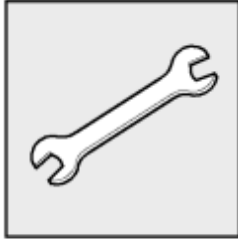

For purposes of clarity:

Fig. 1: Fresh air grill (1) in locked state.

Fig. 2: Fresh air grill (1) in unlocked state.

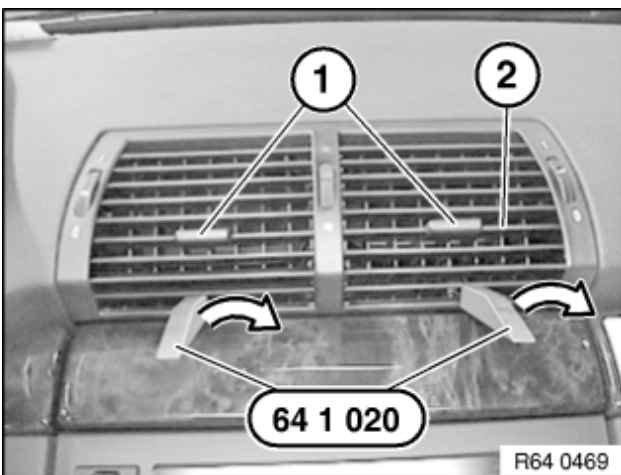

Move air outlet adjuster (1) into illustrated position.

Insert special tool [64 1 020](#) as illustrated at an angle downwards into openings of fresh air grill (2).

To unlock fresh air grill (2), turn special tool [64 1 020](#) through approx. 90° in direction of arrow.

Withdraw fresh air grill (2) in direction of arrow.

Installation:

First allow fresh air grill (2) to snap into place at top.

Unclip Bowden cable (1) and unhook at eyelet (2).

