
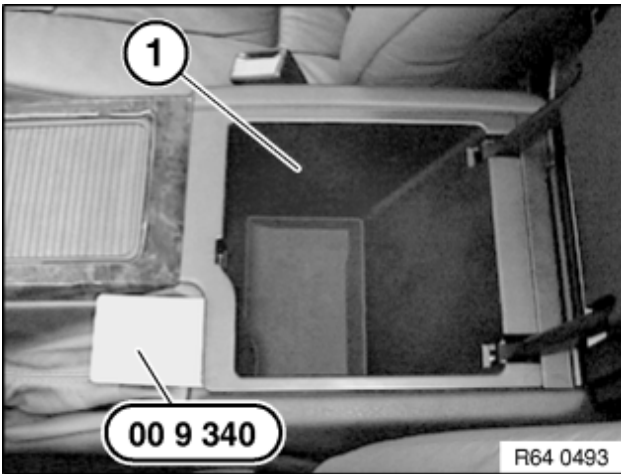



## 64 22 190 Removing and installing/replacing fresh-air grill in rear of car

### Special tools required:

- [00 9 340](#)

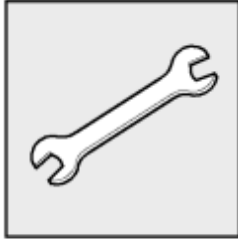

Lever out storage box (1) with special tool [00 9 340](#) and remove.



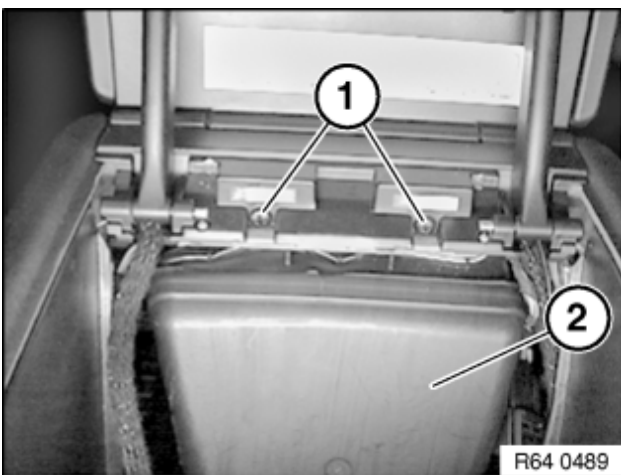


Loosen screws (1).

### *Installation:*

Ensure that air duct (2) is correctly seated.

Pull out fresh-air grill (1) in direction of arrow.

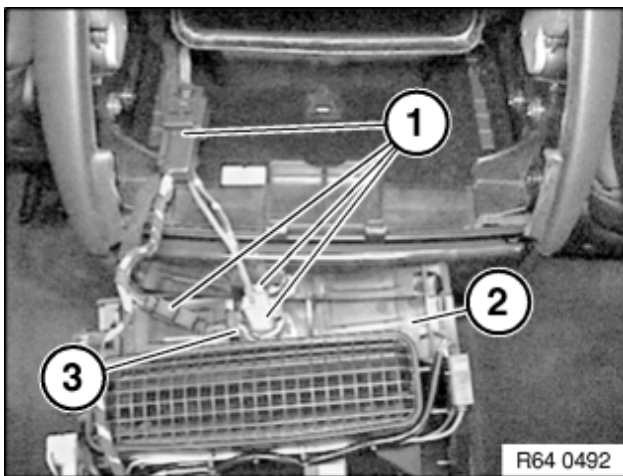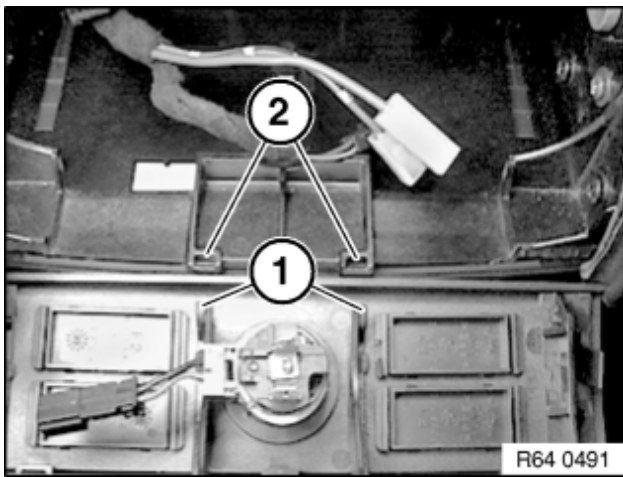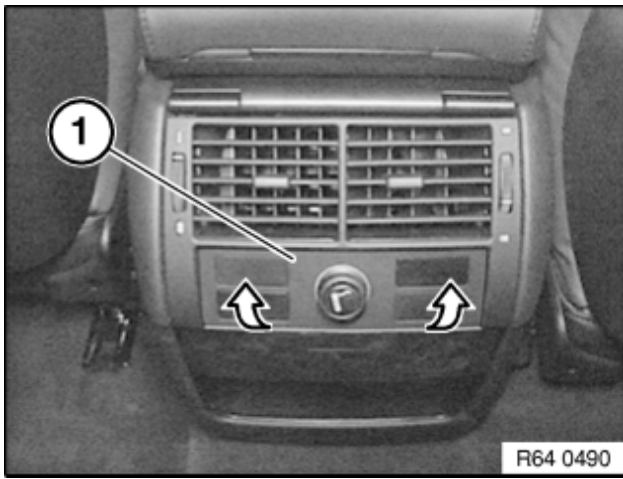

### Installation:

Snap journals (1) into place in openings (2).

Disconnect plug connections (1).

If necessary, disconnect plug connections on switch for seat heating.

Remove fresh air grill (2).

### Replacement:

Unclip cigarette lighter (3).

If necessary, unclip switch for seat heating.